

AQUACHEF™

Automatic Fish Feeder

Instructions for Model
#8024

Warning and Safety Instructions	Page 2
Aquarium Installation	Page 3
Programming Timer	Page 4
Warranty	Page 5



CURRENT

WHAT'S NEXT

EMAIL: INFO@CURRENT-USA.COM
WWW: WWW.CURRENT-USA.COM

SAFETY INSTRUCTIONS

WARNING

To guard against injury, basic safety precautions should be observed, including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

WARNING

To avoid possible damage to feeder, ensure the feeder is never submersed or placed into the water.

- Make sure when installing that the feeder can never fall into the water and that it is in a location that it can be easily refilled.
- If the feeder falls into the water, or water drips inside the unit or timer compartment, remove the batteries, open all parts and let the unit dry for two days. Replace batteries.
- Always remove batteries and keep in a cool dry place when not in use.
- Never leave battery compartment open after programming the unit or changing the batteries to prevent water damage
- Warranty is void if the feeder is ever submersed or falls into the water.

SAVE THESE INSTRUCTIONS



CURRENT

WHAT'S NEXT

FEEDER INSTALLATION

FEEDER PREPERATION:

1. Remove the Feeder from the box and inspect thoroughly for any signs of damage, even if the box does not show damage. If you notice any damage (cracked covers, damaged timer, broken lid, etc...) please stop and contact your dealer immediately.
2. Open battery cover and install two AA (1.5V) batteries. Do not use rechargeable batteries. If the symbol LO appears on the display, the batteries being installed need to be replaced.
3. Adjust feed dispensing door to the maximum setting. Slide hopper off of feeder and fill with flake, pelleted or powdered fish food. Slide hopper back onto feeder and close dispensing door.
4. If refilling hopper, be sure hopper is cleaned before refilling with new food. This will help prevent food spoilage.

ADJUSTING FEED AMOUNT

1. By adjusting the feed dispensing door, the amount of food dispensed at each feeding can be set. Simply adjust dispensing door to desired setting and press the MANUAL button to measure how much feed will be dispensed in one feeding. Adjust dispensing door as desired.

NOTE: As a general rule, aquarium fish only need to be fed 1-3 times daily. Feed only the amount of food the fish will consume in 5-10 seconds. Over feeding can cause cloudiness, ammonia problems and can create a deadly imbalance in an aquarium tank.

THE AQUACHEF IS DESIGNED TO BE INSTALLED TWO WAYS:

Always ensure that the feed dispensing door will dispense food directly into the aquarium

1. Using mounting bracket included, screw the bracket frame to the lip of the aquarium. Place the base of the feeder onto the bracket frame. Adjust the feeder by sliding on the bracket to ensure that fish food is dispensed directly into the aquarium.
2. If bracket cannot be mounted onto aquarium, used the double-sided tape to mount base of feeder to the lid. Ensure food is dispensed directly into the aquarium.
3. Test feeder by pressing the "M" button on the feeder and ensure that the feed drops into the water and not on the ground or tank.

PROGRAMMING TIMER

PROGRAMMING

BUTTON DESCRIPTION:

MODE+- Button: Local time and feeding time are set by this button.

SET+- Button: After pressing the MODE button, the SET button allows the respectively displayed times to be changed.

ADJUST+-Button: After pressing the SET button, the respectively effected symbol (either time or feeding mode) blinks and can be set to a higher number with "+" or lower number with "-" button.

MANUAL Button: Automatically rotates the hopper once for a single manual feeding.

1. SET THE CLOCK:

Press SET button once and hours will blink.

Press the ADJUST button to set hour time. Press MODE and minutes will blink.

Press the ADJUST button to set minutes.

Press SET again and the current time will be displayed. The timer operates on a 24.00 hour cycle, therefore 5 p.m. = 17.00 hours.

2. SET THE FEEDING TIME:

Press the MODE button, 00:00 will be displayed.

Press the SET button, hours blink.

Press the ADJUST button to program hour of first feeding time.

Press the MODE button, minutes will blink.

Press the ADJUST button to program the minutes of first feeding time.

Press MODE again and the "1" digit will appear. This indicates a feeding at this programmed interval. By pressing ADJUST again, the display will change to "↓" indicating a single feeding at this interval, press ADJUST again will change to "↓ ↓" indicating a double feeding will occur at this programmed interval. Each feeding will be separated by a 60 second interval. Press SET again and first feeding interval program will be complete.

3. PROGRAMMING ADDITIONAL FEEDINGS

Repeat steps above for programming additional feedings. The feeder can be programmed for up to 4 times daily.

When the MODE button is pressed four times in sequentially, the timer will skip to the next feeding interval.

4. DELETING A FEEDING PROGRAM

Press MODE program to find program that will be deleted.

Press SET to select the program.

Press MODE twice and the number of the program will blink.

Press ADJUST to delete program.

Press SET to confirm deletion.

5. MANUAL OPERATION

Press MANUAL button, feeder will automatically dispense one feeding.



CURRENT

WHAT'S NEXT

WARRANTY

CURRENT USA, INC. ONE-YEAR LIMITED WARRANTY

Current USA, Inc. warrants this product against defects in materials and workmanship of a period of ONE (1) YEAR from the date of original retail purchase.

Note: Current-USA, Inc. One-Year Limited Warranty does not cover damage caused by the following: Improper installation, saltwater corrosion, and electrical surges.

If you discover a defect, Current USA, Inc. will, at its option, repair or replace the product at no charge to you, provided you return it during the warranty period. It is required that you present this warranty card and a copy of the bill of sale as proof of original purchase date, in the event the product needs repairs, within the warranty period. Please see your dealer for return options. This warranty applies only to products by or for Current USA, Inc. that can be identified by trade name, or logo affixed to them. Current-USA, Inc. does not warrant any products that are not Current-USA, Inc. products. This warranty does not apply if the product has been damaged by accident, abuse, misuse or misapplication or if the product has been modified without the written permission of Current-USA, Inc.; or if any Current-USA, Inc. logos have been removed or defaced.

THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHERS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. Current USA, Inc. SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING ANIMALS, PLANTS, TANKS OR OTHER AQUARIUM RELATED ITEMS AND/OR EQUIPMENT. Current USA, Inc. IS NOT RESPONSIBLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY, OR REPLACEMENT OF EQUIPMENT OR PROPERTY, OR ANY COSTS OF RECOVERING OR REPRODUCING ANY EQUIPMENT, ANIMALS OR PLANTS USED OR GROWN WITH Current USA, Inc. PRODUCTS.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or exclusions of implied warranties, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from jurisdiction to jurisdiction.